



assembly feet on module

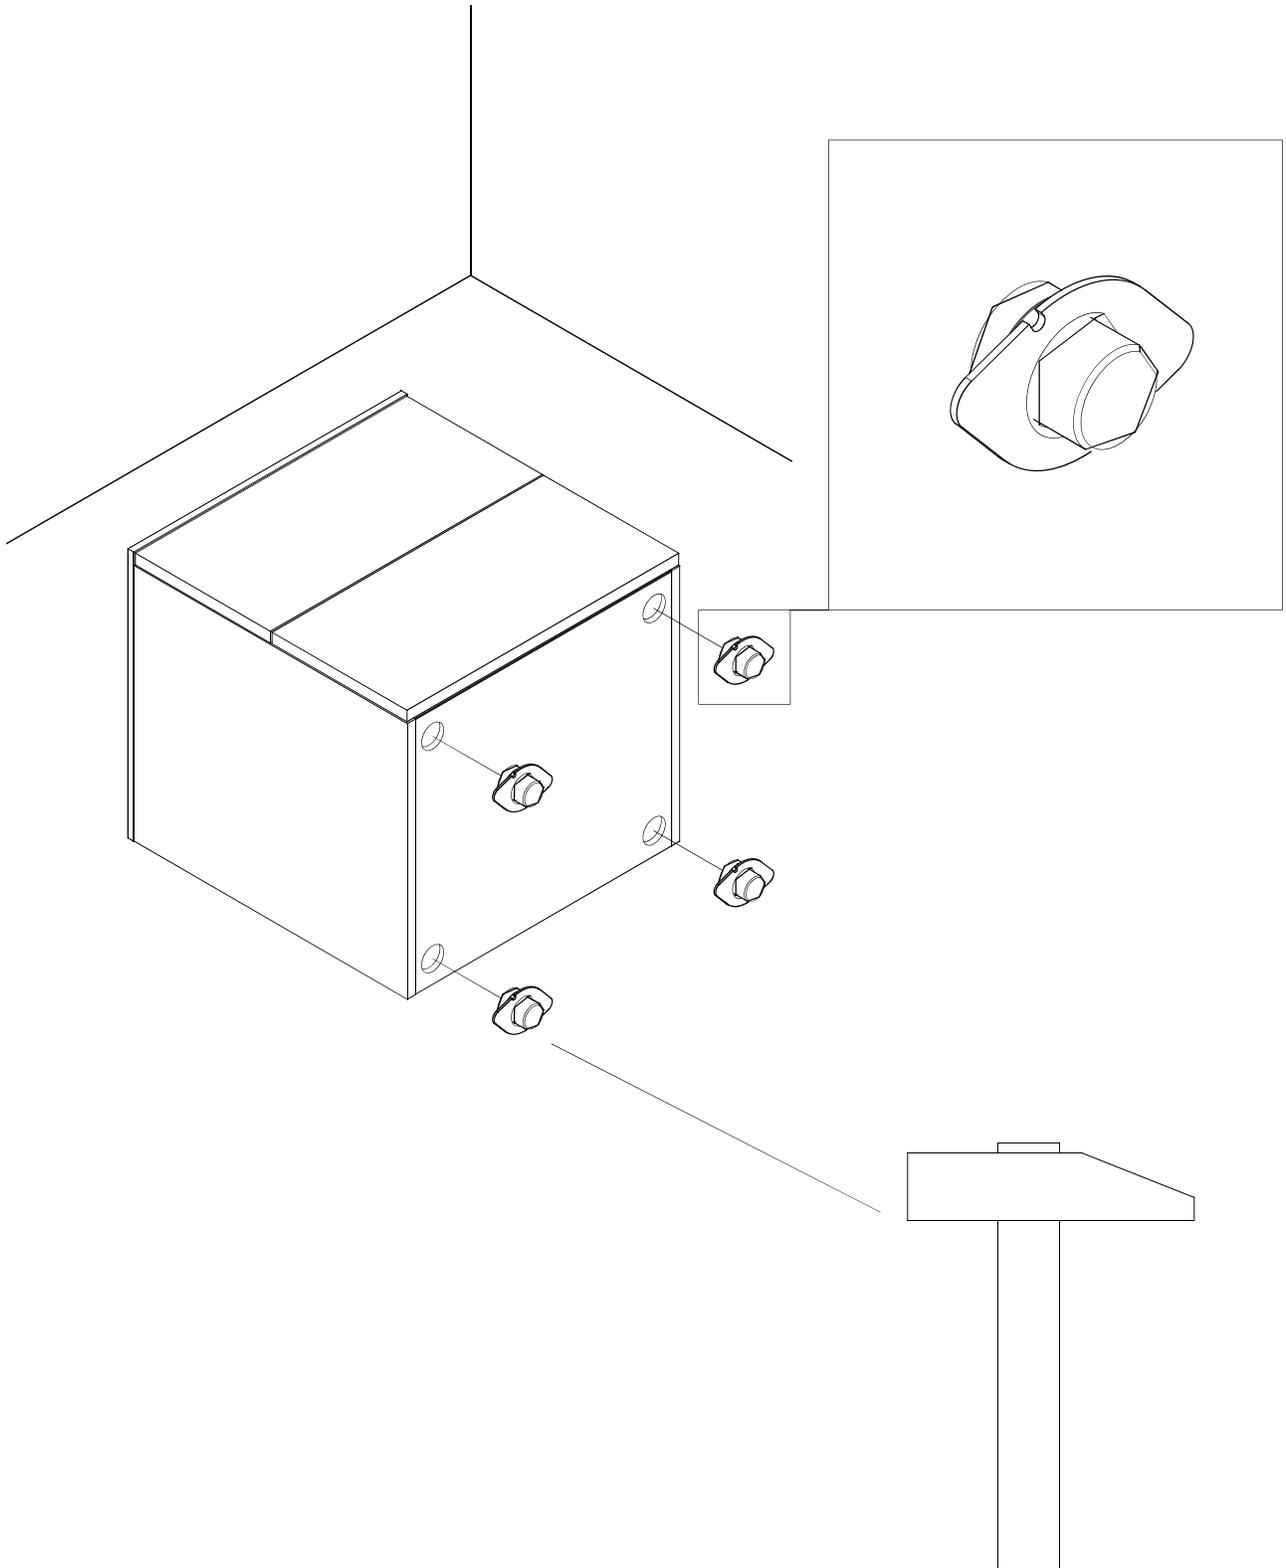


Assembly Base for Ginevra Sideboard

1 Wooden Version


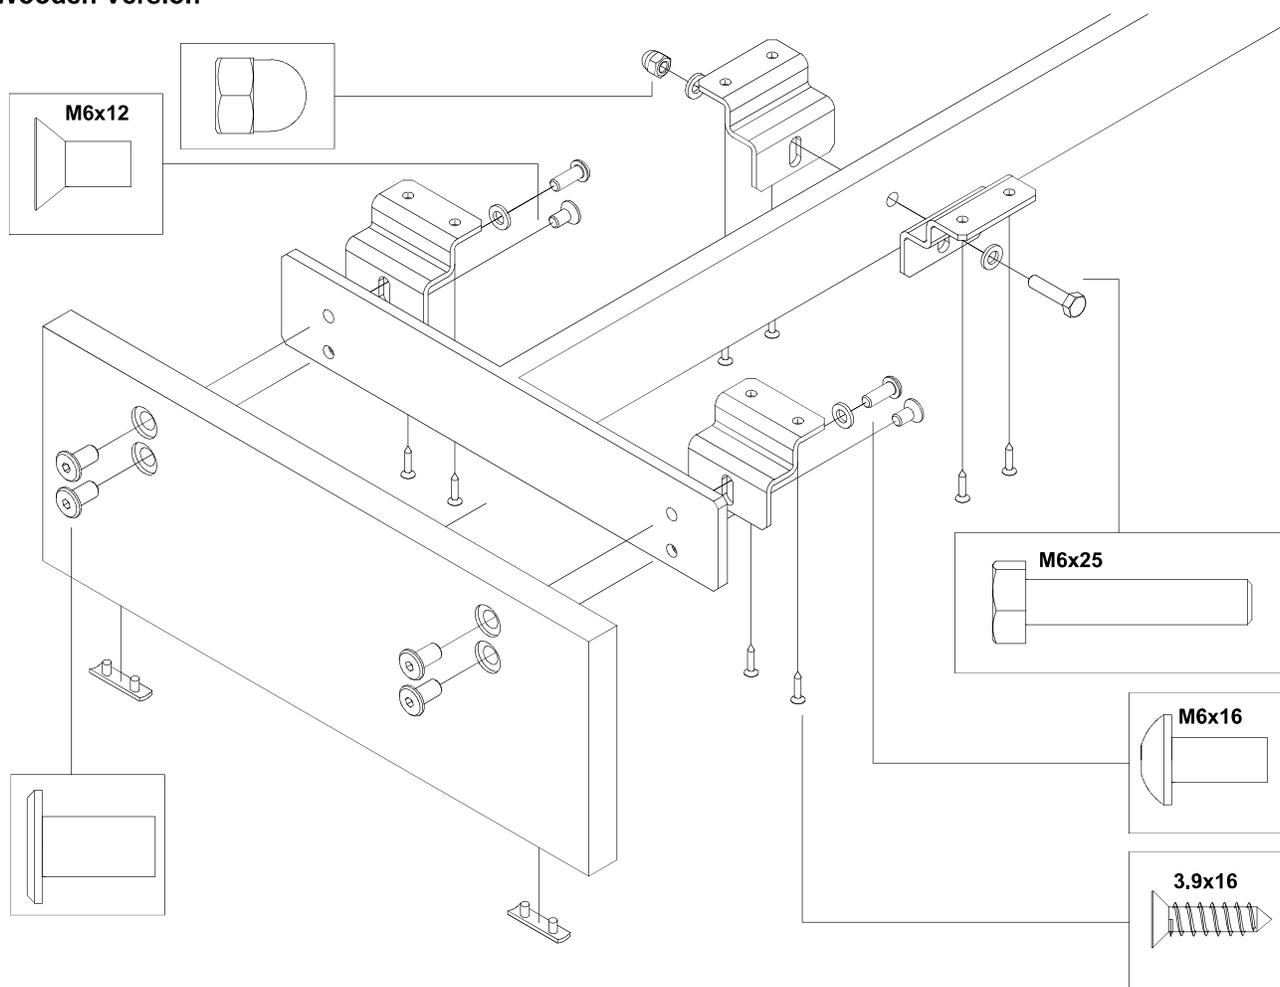


2 Metal Version

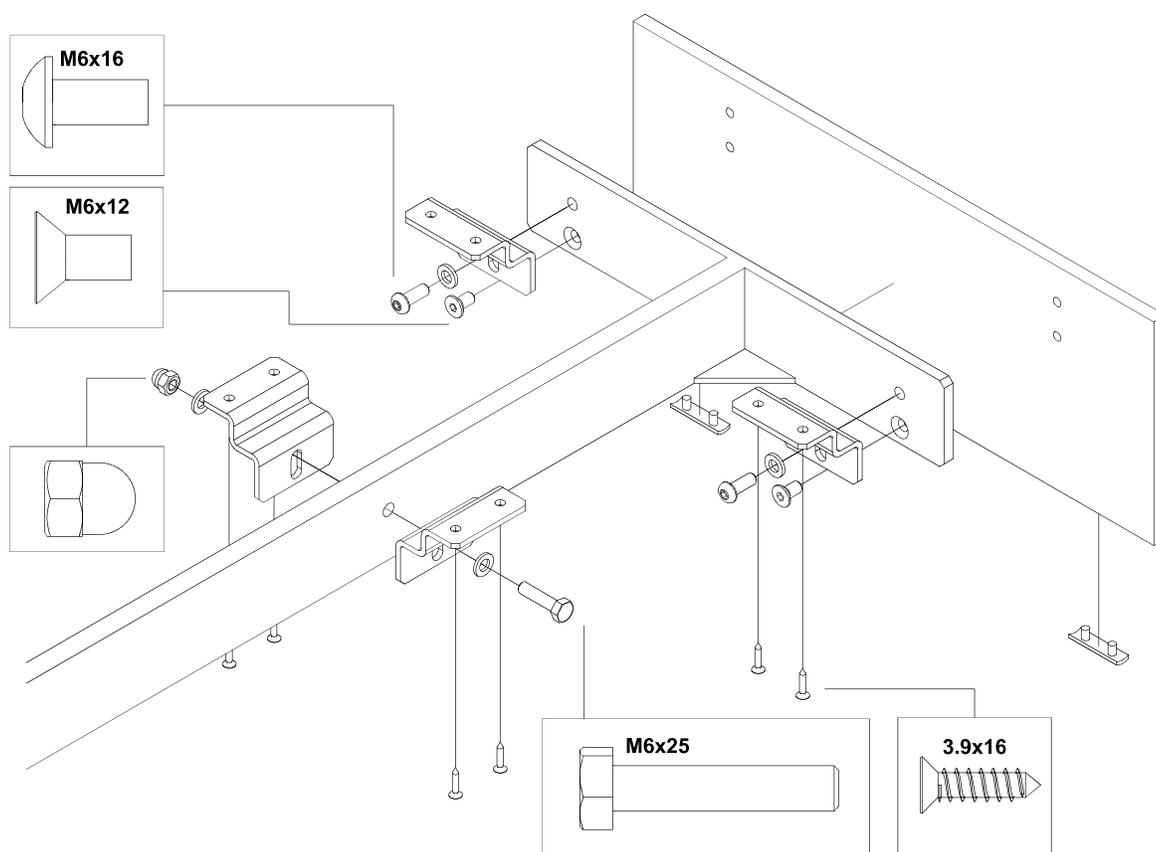

adjustment of hinges

1 height adjustment:

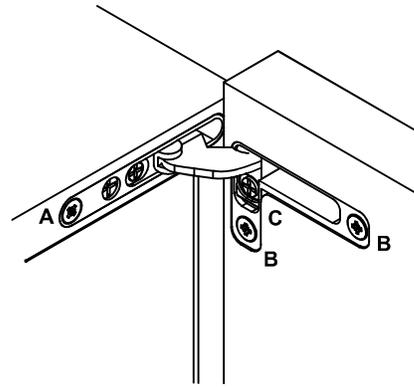
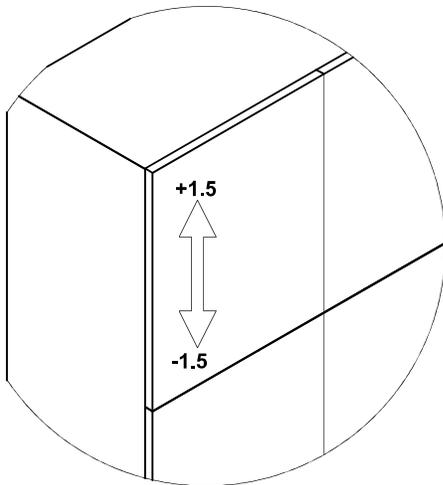


1-insert the hinge in the groove on the structure and tighten it operating screw A

2-put the door into the right position and slowly open it while tightening with screws B



3-adjust the height of the door operating screw C

2 width adjustment:

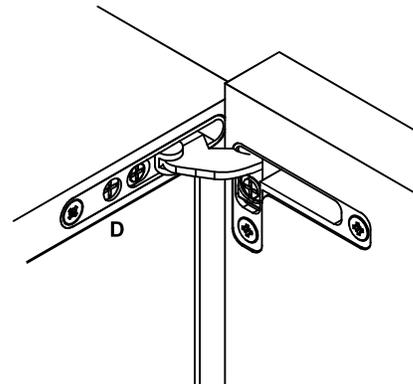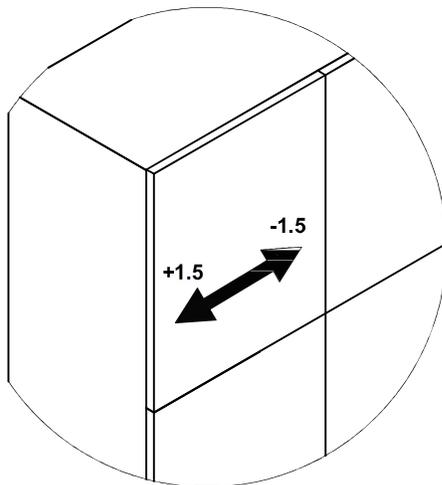

4-operate screw D to adjust the door



3 depth adjustment: turn the screw shown in the illustration clockwise or anticlockwise for movement.

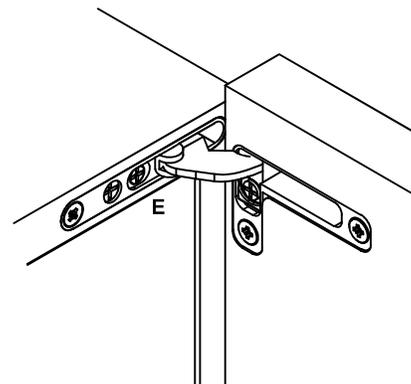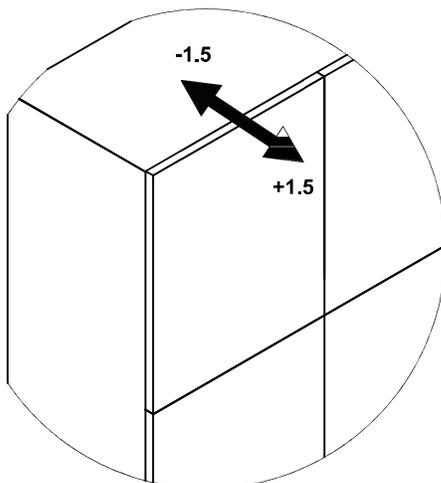


5-operate screw E to adjust the door

Fixing cupboards on the ground or on a base - ATTENTION the cupboards are always anchored


- 1** attach the bracket to the wall
(for drywall, please choose the most suitable hardware)

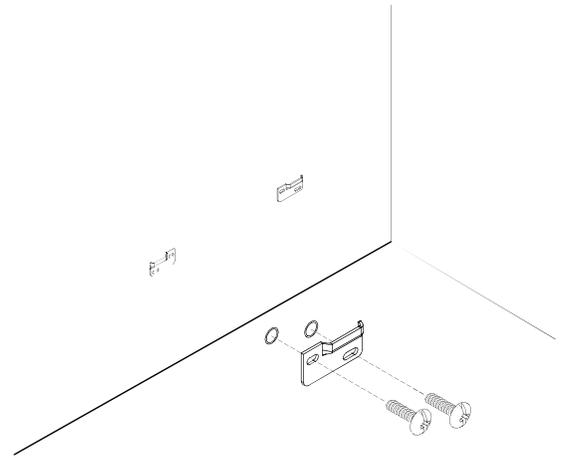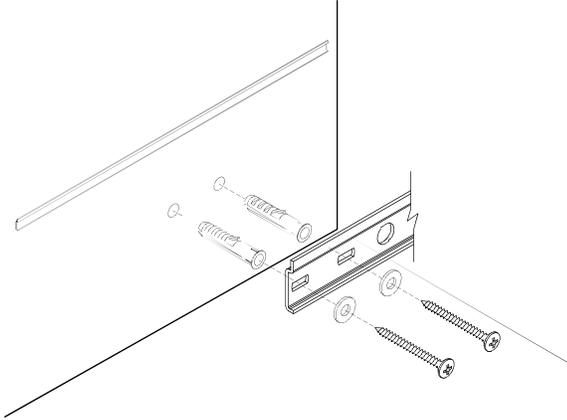


- 2** take the screw (A) to half adjustment

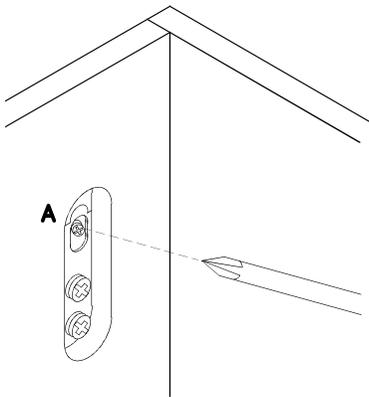


- 3** attach the unit to the wall mounted bracket

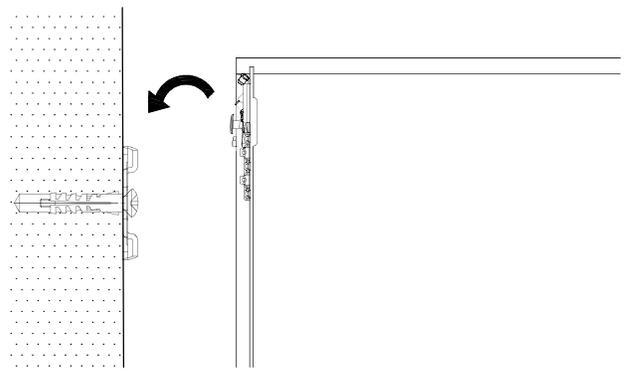




- 4** height and depth adjustment

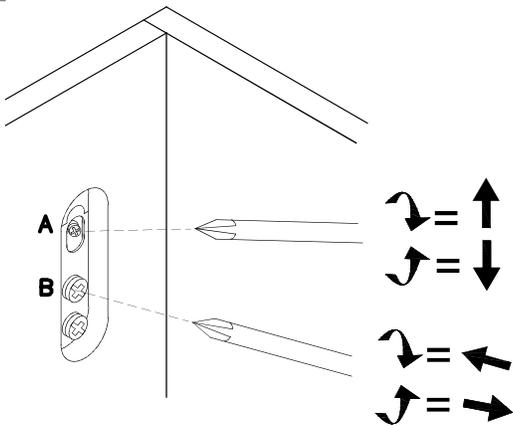

- 5** anti-tipping block

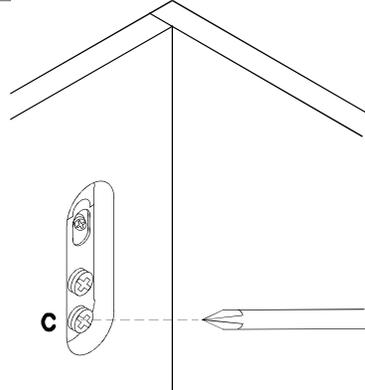


open units with mirror back

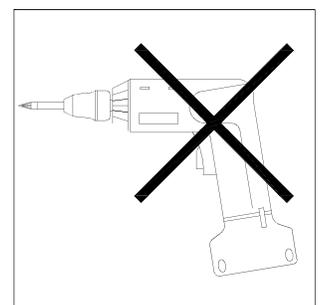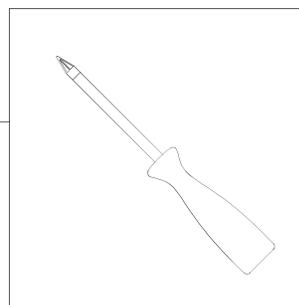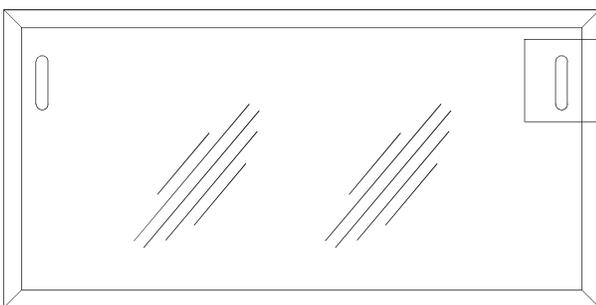


REGULATION OF SIDEBOARD BASE


1 - Loosen the screws of the lower brackets.

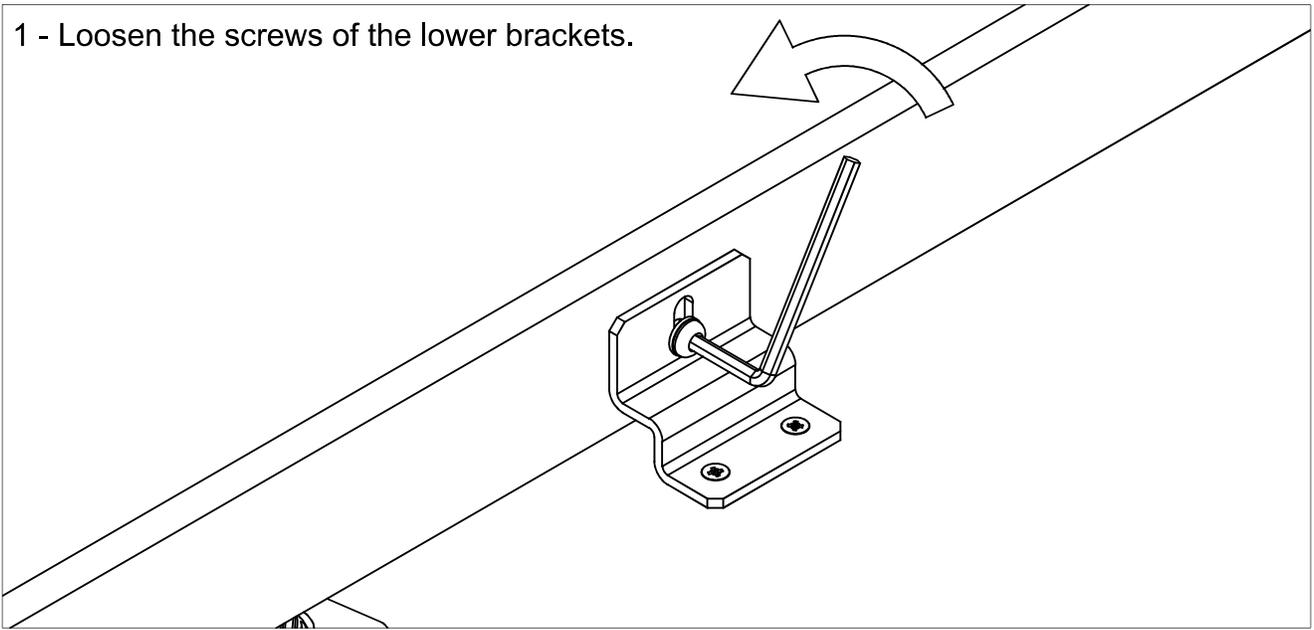

2 - Operate the foot from the inside of the sideboard until optimal regulation.


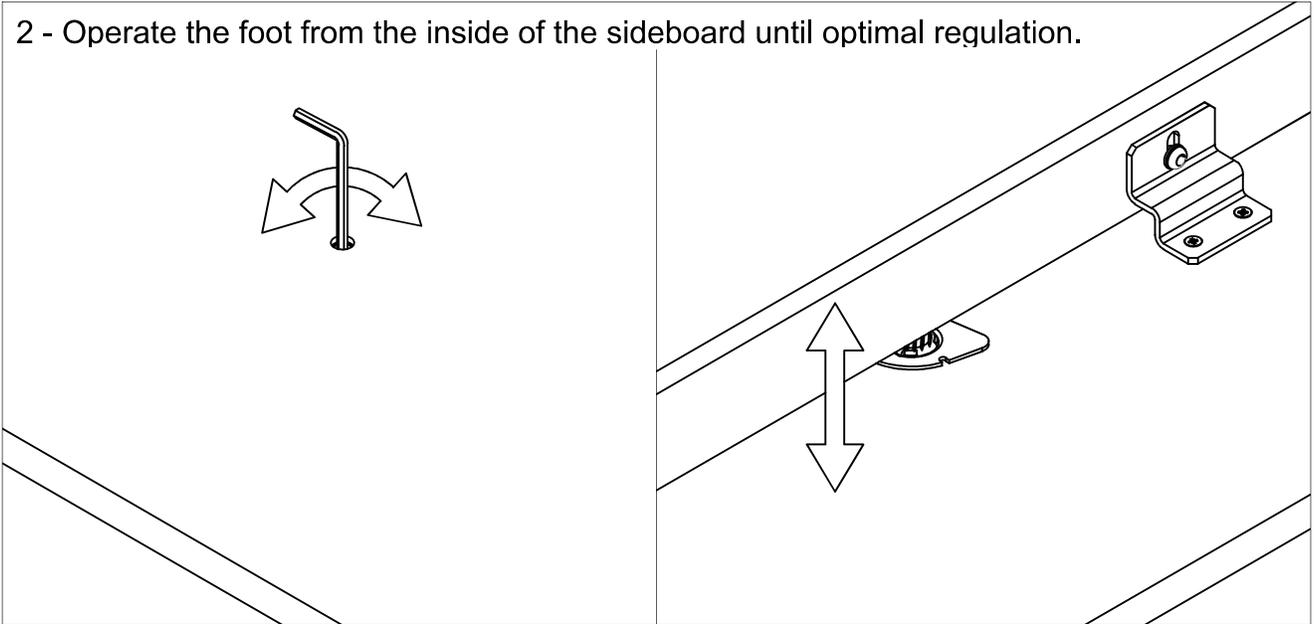


3 - Tighten the screws of the lower brackets.

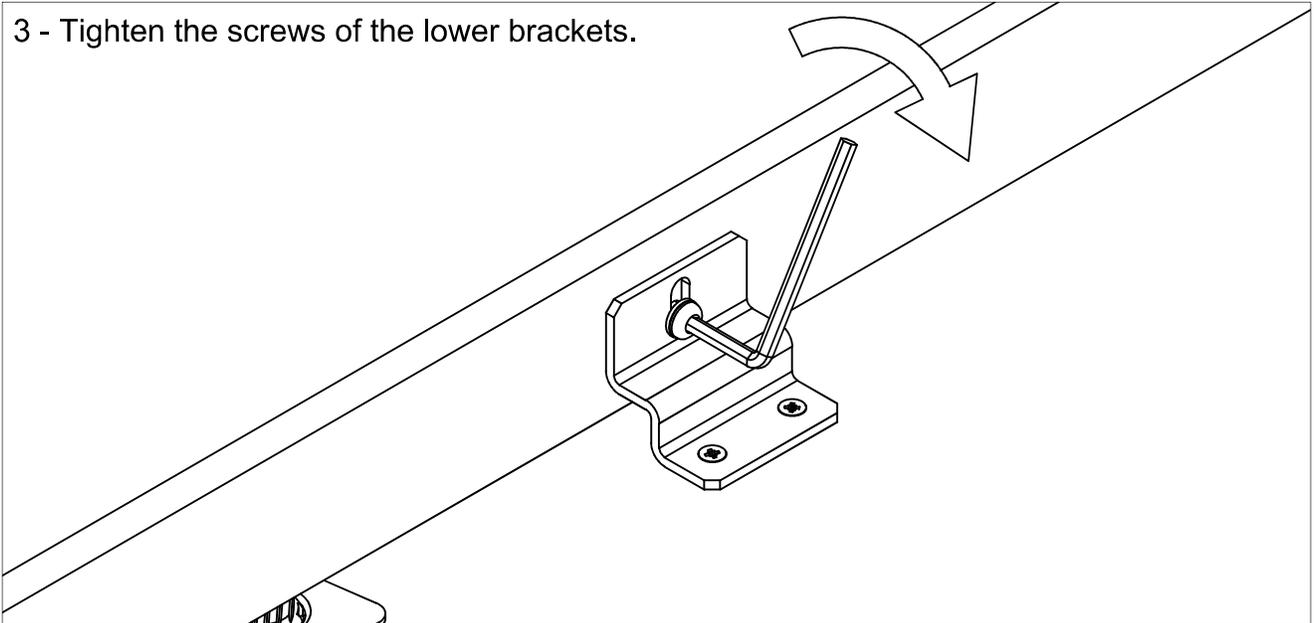


Montaggio supporto Centrale Madie

1

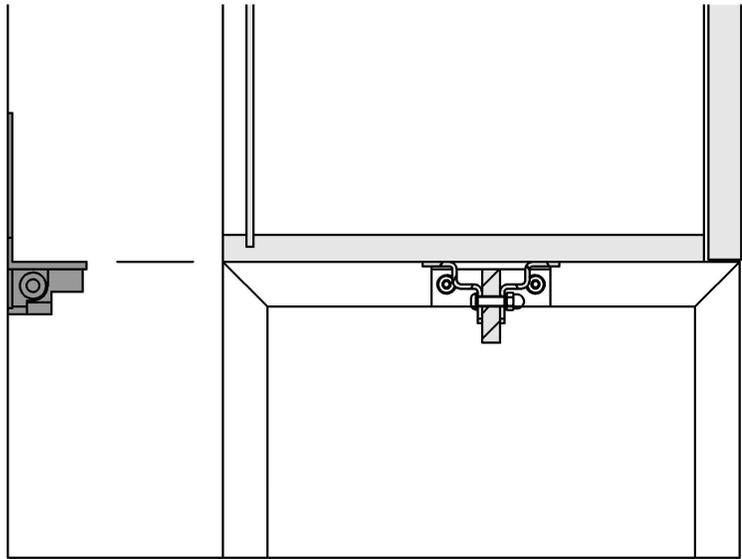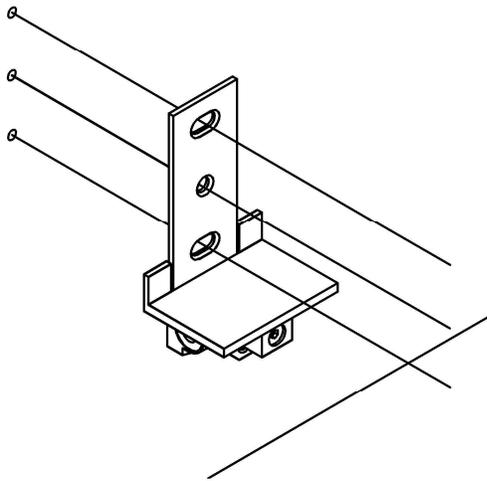

2

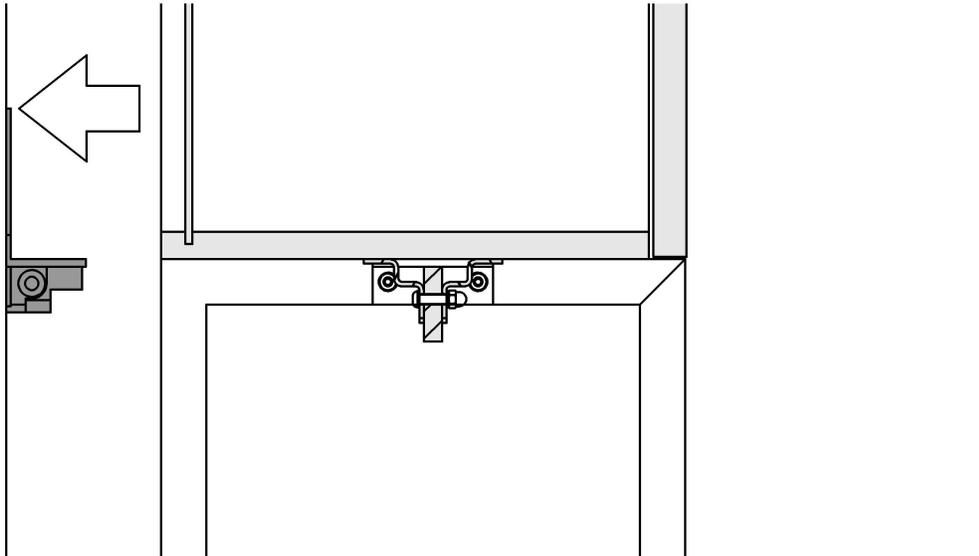

3

